


## INSTALLATION INSTRUCTION FOR VD-DMF-43-UWI53

### Important Installation Information

- Please read the complete description before starting the installation.
- Cable bending radius must not be less than 40 mm, and do not bend the cables more than 15 times in a row.

### Installation Overall View

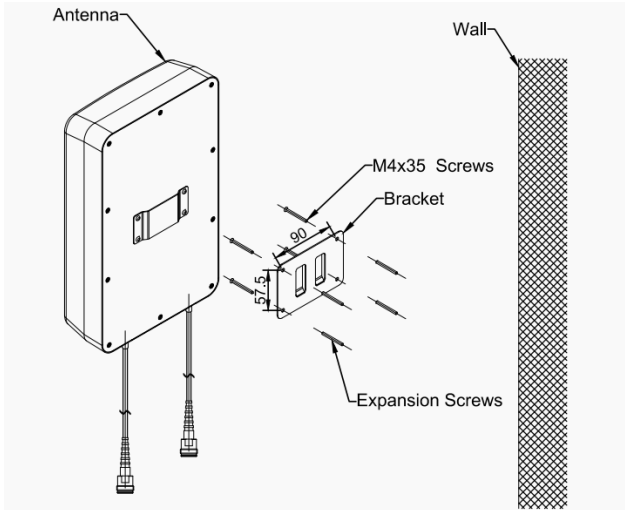

### Installation Steps

- 1) Mark the hole locations on the wall according to the hole spacings shown in the above drawings.
- 2) It is recommended to use a 6 mm drill bit to drill holes in the wall. The depth of the holes should be deeper than 38mm and the number of drill holes is 4.
- 3) Clean the dust of the 4 holes.
- 4) Use a hammer to knock 4 white expansion screws into such 4 drilled holes.
- 5) Align the antenna bracket with the expansion pipe holes on the wall then insert 4 screws and tighten them with a wrench. Firmly fix the bracket to the wall.
- 6) Hang the antenna onto the antenna mounting bracket related position that has been fixed to the wall.

### Online Support

Scan the QR code to submit tickets:



Copyright © 2026 ANDREW®, an Amphenol company. All Rights Reserved.

Amphenol and ANDREW are registered trademarks of Amphenol and/or its affiliates in the U.S. and other countries. All product names, trademarks and registered trademarks are property of their respective owners.

Andrew Wireless Systems GmbH, 26-March-2026